

Battery Voltage

J 2

- J1 Pin 1 **09I** hot when in park, to entry door and lift s/w, **15A Fuse 18.**
- J1 Pin 2 **03E** hot with headlights to s/w back lighting, **15A Fuse 10.**
- J1 Pin 3 **09N** hot with headlights to fair box, **15A Fuse 10.**
- J2 Pin 1 **10R** Battery hot to door module, **25A Fuse 15.**
- J2 Pin 2 **12R** to radio and interlock, **15A Fuse 19.**
- J2 Pin 3-5 are battery hot, **15A Fuse 22, 23 and 24.**
- J3 Pin 1,2 and 5 are ignition hot, **15A Fuse 21, 20 and 11.**
- J3 Pin 3 **11W** ignition hot stop request sign, **15A Fuse 1.**
- J3 Pin 4 **18P** ignition hot to drivers fan s/w, **15A Fuse 13.**
- J3 Pin 6 **11R** ignition hot to monitors, **15A Fuse 3.**
- J4 Pin 1 **19P** ignition hot to step light s/w, **15A Fuse 2.**
- J4 Pin 2 **03P/K** ignition hot to A/C s/w, **15A Fuse 6.**
- J4 Pin 3 **03T** ignition hot to luggage light, **15A Fuse 15.**
- J4 Pin 4 **07I** ignition hot to exit light, **15A Fuse 15.**
- J4 Pin 5 **06R** ignition hot to the s/w's in the dash & ADA ajar light, **15A Fuse 14.**
- J4 Pin 6 **24I** ground to window ajar light, win/ajar relay.
- J5 Pin 1 **23Y** ground input from rear window ajar s/w.
- J5 Pin 2-15 are to ground.

J 1

Ignition Voltage

J 3

- HJ1 Pin 1 **04P** voltage to heater 2 low speed.
- HJ1 Pin 2 **04O** voltage to heater 2 high speed.
- HJ1 Pin 3 **07O** voltage to heater 1 high speed.
- HJ1 Pin 4 **0** voltage to heater booster pump/gate valve.
- HJ1 Pin 5 **07P** voltage to heater 1 low speed.
- HJ1 Pin 1 **04AP** ground from heater 2 low speed s/w.
- HJ1 Pin 2 **04AO** ground from heater 2 high speed s/w.
- HJ1 Pin 3 **07AP** ground from heater 1 high speed s/w.
- HJ1 Pin 4 **07AO** ground from heater 1 low speed s/w.

HJ 1

Ignition Voltage

J 4

- J6 Pin 1 **08K** ignition hot to LH dome lights, **15A Fuse 8.**
- J6 Pin 2 ground to LH dome lights.
- J7 Pin 1 **04B** ignition hot to LH reading lights, **15A Fuse 6.**
- J7 Pin 2 ground to LH reading lights.
- J8 Pin 1 **107I** ignition hot to LH exit lights, **15A Fuse 15.**
- J8 Pin 2 ground to LH exit lights.
- J9 Pin 1 **14E** headlight s/w hot to destination sign light, **15A Fuse 10.**
- J9 Pin 2 **05Y** ignition hot to destination sign motor, **15A Fuse 12.**
- J9 Pin 3 ground to destination sign.
- J10 Pin 1 **12R**, **15A Fuse 19.**
- J10 Pin 2 **05Y**, **15A Fuse 12.**
- J10 Pin 3 ground.
- J11 Pin 1 **04I** ignition hot to RH reading lights.
- J11 Pin 2 **08K** ignition hot to RH dome lights, **15A Fuse 8.**
- J11 Pin 3 ignition hot, **15A Fuse 8.**
- J11 Pin 4 **08A K** ignition in from dome light s/w.
- J11 Pin 5 **20P** ignition from chassis ignition.
- J11 Pin 6 **08O** ground from chassis park.
- J11 Pin 7 **04A I** ground from RH reading light s/w.
- J11 Pin 8 **04A B** ground from LH reading light s/w.
- J11 Pin 9 **09N** hot from headlight switch.
- J11 Pin 10 23E ground.
- J11 Pin 11 03E ground from rear door switch.
- J11 Pin 12 03AE ground to rear ajar light.

J 11

J 5

J 7

J 6

- 07 - 04A 01 - 04I
- 08 - 04A 02 - 08K
- 09 - 09N 02 - 08O
- 10 - 23E 04 - 08A K
- 11 - 03E 05 - 20P
- 12 - 03AE 06 - 08O

- 01 - 23Y
- BALANCE - GROUND